


Disassemble

1.Remove the back cover.



2.Remove the acetate tape

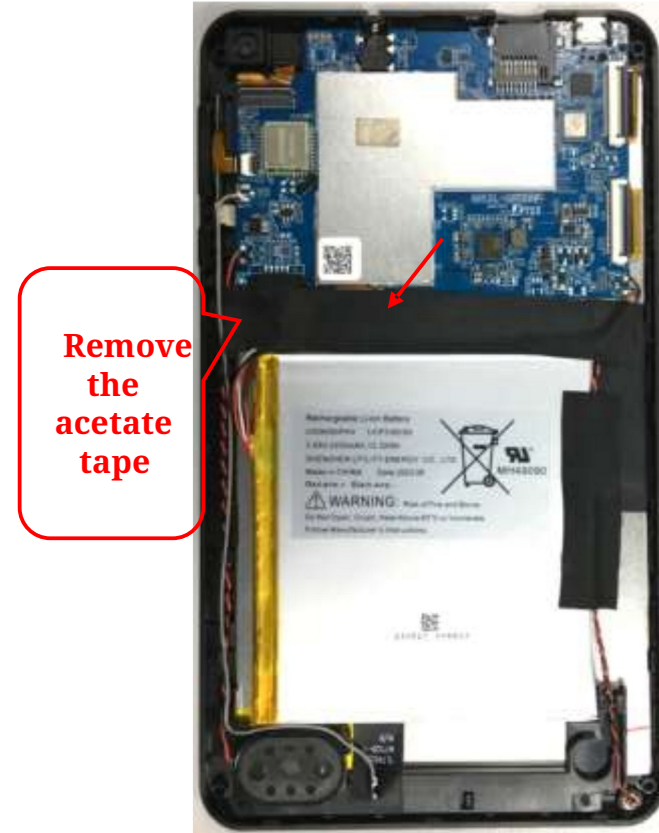

Disassemble

3.Remove the acetate tape from the battery holder and MIC cable



Remove the acetate tape

4.Remove the battery and motherboard connection cable.



Disconnect the power supply cable

Disassemble

5. Peel off the pull-tab adhesive from the bottom of the battery



**Location
to pull
the
pull-tab
adhesive.**




**Pull the tab
to remove the
pull-tab
adhesive.**

Disassemble

6. Remove the battery



7. Open the locking clips of the TP (Touch Panel) flex cable and the screen flex cable.

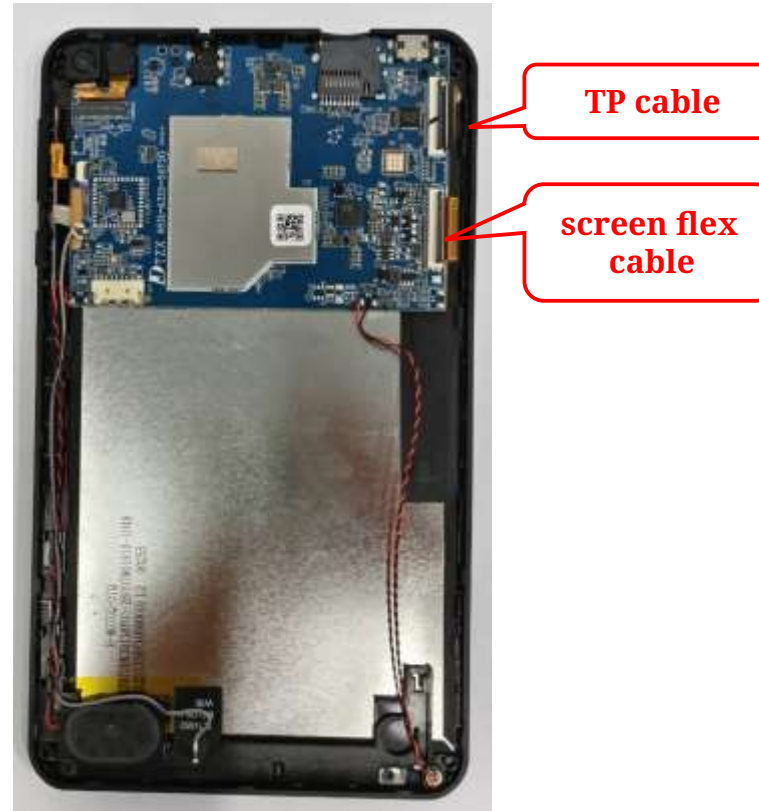

Disassemble

8. Remove the TP (Touch Panel) flex cable and the screen flex cable.



Use a disassembly tool to gently pry and remove the TP (Touch Panel) flex cable and the screen flex cable

9. After removing the TP (Touch Panel) flex cable and the screen flex cable.



Disassemble

10. Remove the camera flex cable and the camera.

11. Remove the WIFI antenna.

Use a disassembly tool to gently pry and remove the camera flex cable and the camera.



Use a disassembly tool, dampened with a small amount of alcohol, to gently remove the antenna.




Disassemble

12.Remove the MIC



13.Remove the speaker bracket.

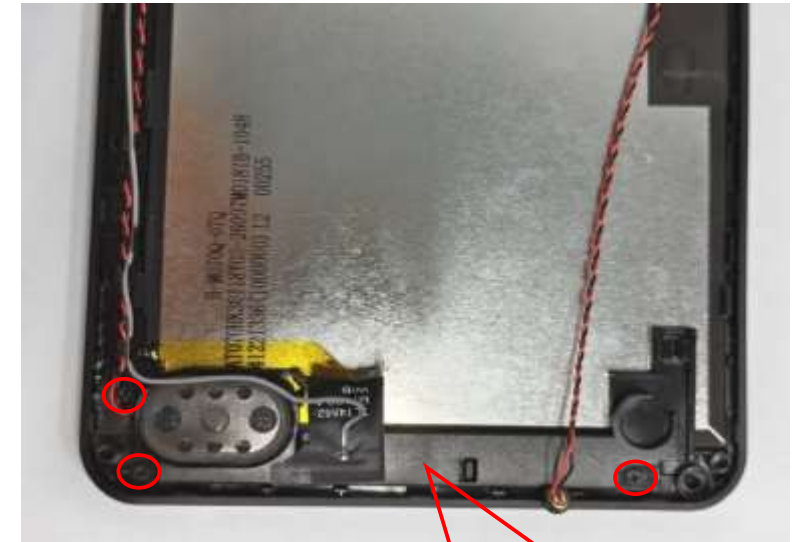

Remove three screws to
take off the bracket.

Disassemble

14. Remove the speaker bracket and take the cables out of the cable management slot.



15. Disconnect the side key FPC.



Disconnect
the side
key FPC

Disassemble

16.Remove the motherboard.

