

# Kurio<sup>®</sup> WATCH

The Ultimate Smartwatch Built for kids



## USER MANUAL



### Apps & Games

- Snake
- Tic Tac Toe
- Pirates Battle
- Ninja Roll
- Air Music
- Sport Challenge
- Activity Tracker
- Phrase Translator
- Photo Filter
- Drawing
- Messaging
- Emergency app
- Time features
- Calculator
- Calendar
- Contact list
- Reminder
- Take photos & videos
- Music player
- Phone function

### Safety precautions

- Please do not use the KURIO Watch if you have or had symptoms/signs of skin irritation.
- Do not attempt to disassemble, repair or modify the product or replace the batteries. This will invalidate the warranty. There is danger of explosion if the battery is replaced incorrectly.
- Use only the micro USB cable supplied with KURIO Watch for charging the battery and transferring data. Do not damage or deform the power supply micro USB cable and connector. If it is damaged or deformed, it may cause electric shock or malfunction when used. When removing it from the device, be sure to remove by holding the plug attachment and not by pulling the cord.
- In case of data transfer from the KURIO Watch to the PC or MAC, to avoid data corruption or lost data, follow the instruction in this manual. The user is responsible for any damage or lost of data, the misuse, malfunction or modification.
- If for any reason, the screen (display) is cracked or broken, immediately stop using the product.
- Do not drop the product or subject it to severe impact.
- Do not use and do not expose the device in extreme temperatures (hot or cold), dusty conditions or damp conditions. Do not expose to direct sunlight. Do not expose the device to water, liquids, rain, dust or moisture. If your KURIO Watch is exposed to liquid, power off the device immediately and clean/dry it.
- Avoid using the device near strong magnetic fields. If your KURIO Watch has been exposed to magnetic fields, please restart the device, following the instructions in this manual if necessary.
- Please keep the box and this manual for further reference. This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.

**WARNING: All packing materials such as internal bags, plastic collars, plastic films and carton inserts should be discarded before handing the device over to a child, for your child's safety.**

### Included

- KURIO Watch with rechargeable Lithium battery\*
- Micro USB cable
- User Manual

\* Battery is not replaceable

## WARNING

Please remove the screen protective film before turning on your KURIO Watch.

If you unfortunately find that the screen freezes during initial setup, and that the device cannot be turned off by pressing the power button, please press the Reset button.

To do so - please note that the Reset button is located on the left-hand side of the KURIO Watch, under the USB cover. Once you have lifted the USB cover, you will see a small hole. Insert a paper clip into the hole, and press once to Reset. This will automatically restart the KURIO Watch.



## Getting Started!


We recommend fully charging your device before use. A full charge takes about 3 hours. To charge your KURIO Watch, connect it to a USB port with the Micro USB cable included with the product. How long the battery lasts depends on the device usage. More frequent usage drains the battery more quickly. Additionally, some activities require more battery consumption, such as games, videos, Bluetooth® communication, etc.

### BATTERY TIME FOR REFERENCE


Standby	10 days
Normal Use	1 day
Heavy Use	2 hours

## First Time Use

When you launch your KURIO Watch for the first time, you will follow a quick setup guide and enter your Child's information. **Parental Supervision is ALWAYS recommended for first time use.** During setup, parents can enter their Child's personal information (blood type, medical conditions, emergency contacts and more). In case of an emergency, this information will be easily accessible! You can edit the personal information at any time under Settings.

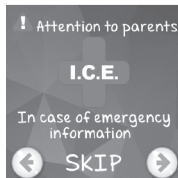

## Change the theme

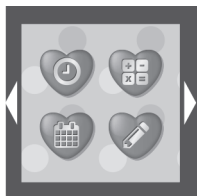

To choose your preferred theme, press and hold anywhere on the screen for 2 seconds to enter the Customization Mode. Swipe Left or Right to select different themes. Then press the screen when you've found a theme you'd like to choose.

## Change the Watch face



You can choose between digital and analog watch faces. To choose one face, press and hold anywhere on the screen for 2 seconds to enter the Customization Mode. Swipe Left or Right to select different watch faces. Press the screen when you've found a watch face you'd like to select.

## Navigation

Swipe Left and Right to navigate the main menu. Press an icon to select it, Swipe down to display the Option bar. In the Option bar, you can activate or deactivate the flashlight, open the Camera app, use Bluetooth®, see your emergency information, and adjust the volume. Swipe up or press anywhere on the main screen to remove the Option bar from displaying. The Option bar is accessible from all screens.




**WARNING : On many apps & games, swipe right (from left edge) to go back to previous screen.**

## Wristband

### Step 1

To remove the module from the wristband, maintain the module on the top and on the bottom, so it doesn't fall.

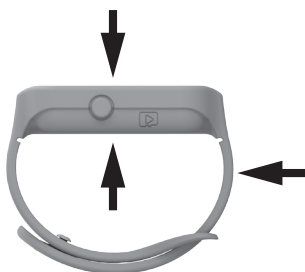

### Step 2

The module is outside the wristband. Be careful when manipulating the module alone. To insert the module inside the wristband, push the module inside the wristband until it is locked.



Please note for the color changing wristband, you need to put on your wristband to see the changing color. When you remove the wristband, it will get back to its initial color.


## Settings

Swipe Right to the last screen of the main interface to access the Settings. 


FOLDER	ITEMS	DESCRIPTION
System	Language	Change the language of the device
	Vibrations	Activate / Deactivate the vibrations
	Bluetooth®	Manage the Bluetooth® features
	Saving	Decide where to save the photos and videos taken: Internal Memory or Micro SD card (if inserted)
	Factory reset	Reset your KURIO Watch device to factory settings. Note: You will lose all your data
	About	See the firmware version, credits and legals
Display	Time & Date	Set the date and time of your KURIO Watch
	Theme	Change the theme
	Watch Face	Change the watch face
	Notifications indicator	Activate / Deactivate the notifications of the activity tracker (achievements)
	Screen	Set the luminosity of your Kurio Watch and the screen timeout.
Sounds	Volume	Adjust the volume of your KURIO Watch
	Mute	Activate / Deactivate the volume
	Incoming call	Select the Phone ringtone (when the KURIO Watch is paired to a smartphone by Bluetooth®). MP3 sounds loaded on the internal memory of the KURIO Watch (not on the Micro SD card) can be used as ringtone.
	Alarm	Select the Alarm ringtone.
I.C.E.	ICE details	Edit the Emergency details. A password is required to access this parental area. Password is <b>1248</b>

## Play 2-Player Games & Send Messages to another KURIO Watch


Pirates Battle and Tic Tac Toe allow you to play with your friend, while you and your friend both use your own KURIO watch. The messaging app also allows you to share messages with another KURIO Watch. Bluetooth® connection is required. You must pair two watches in order to connect them for game play and message sharing.

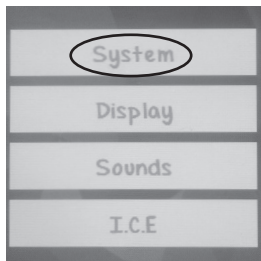


**Step 1 :**  
Go to the settings and select "System".

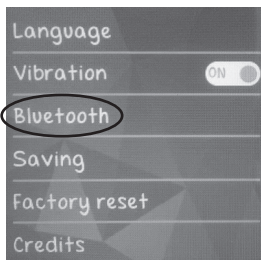


**Step 2:**  
Select "Bluetooth".

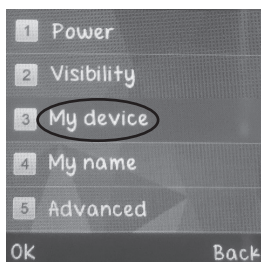

**Step 3 :**  
Select "My device".

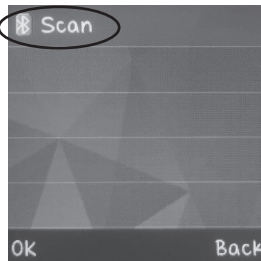

**Step 4 :**  
Select "Scan" to find a Kurio Watch around. Kurio Watches are named "KW-...-...".

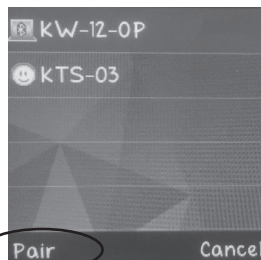

**Step 5 :**  
Select the device and press "Pair". If the device was already paired before, just press "Option" and "Connect".

**The Messaging App works with Android Tablets & Smartphones.**  
(from any version after Android 4.0).  
Download the KURIO Watch Messenger on your Android device. The app is available on the Google Play Store. The pairing process is the same as for the pairing with another KURIO Watch described above.

## Data Transfer Share Photos, Videos, Music

It's possible to connect the KURIO Watch to a computer (MAC / PC) and share photos (jpg, gif, png, bmp), videos (avi, mp4, 3gp), music (mp3, amr, wav). Use the Micro USB that was included to connect your KURIO Watch.

Please follow the following steps:

- Pull up the USB door on the left side of the watch.
- Insert the Micro USB plug into the KURIO Watch.
- Insert the USB plug (standard size) into a USB port of your computer.
- A removable drive - KURIO Watch - will appear on your computer.  
Use this drive to transfer data to and from your KURIO Watch.
- There are 4 folders available in your KURIO Watch drive - Download, Gallery, Music, System.  
Make sure to move the files to and from the appropriate folders so they will appear properly on your KURIO watch.

While files are uploading/downloading, do not disconnect your KURIO Watch. Once finished, remove the watch by following the steps to safely remove hardware from your computer. You can then physically unplug the KURIO watch from the computer.

Minimum PC requirements: From any version after Windows XP.

Minimum MAC requirements: From any version after MAC OS 10.10.

## Tech Support & Warranty Information

If you have any questions about setting up or using your KURIO Watch, please visit us at [www.kurioworld.com](http://www.kurioworld.com) to learn more. All of our products are backed by a 1 Year Limited Warranty. In the unlikely event that you experience a problem, please visit [www.kurioworld.com/support/](http://www.kurioworld.com/support/) to contact our KURIO Support Team.

Please note, this device is warranted only to the original purchaser for a period of twelve months from the original date of purchase, under normal use and service, against defective workmanship and materials. If the product is damaged due to accident, improper or unreasonable use or maintenance (such as a broken screen, fall, water damage, etc.), these damages are not covered by the warranty.

## Warning

Avoid using the KURIO Watch while charging; this may alter the battery charging process and the battery life of the device.

The device should not be exposed to dripping or splashing liquid and never place objects filled with liquid on the device - such as a glass of water.

Do not expose the device to flames.

Never use KURIO while operating a motor vehicle or bicycle.

If you feel discomfort or any pain using KURIO, please stop immediately.

If a small part is coming out of the KURIO, don't try to remove it. Keep it away from small children.

Never force a connector into a port of KURIO. Make sure that the micro USB connector matches the USB port.

To clean up the screen, simply use a soft damp cloth. Do not use alcohol, solvent, aerosol spray, liquid or abrasive cleaners to clean your KURIO.

The product and micro USB cable should be periodically examined to check that they are in good condition. In case of defect, the micro USB cable should not be repaired, but replaced.

## Restricted Use of Electronic Devices

The use of electronic/electric devices may interfere with safe operation of some aircraft and can be restricted with some airline companies. Please check with your airline company before traveling.

## Micro SD Card

You can also share data using a Micro SD Card sold separately. To insert a Micro SD card, pull up the rubber cover of the Micro

SD card on the right side of your KURIO Watch. As soon as you insert a Micro SD card into your KURIO Watch, 4 folders will be created - Download, Gallery, Music, System. Make sure to move the files to and from the appropriate folders so that they can appear properly on your watch. We recommend that you transfer your photos and videos regularly.



## Exposure to Radio Frequency Energy

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with RSS247 of Industry Canada.

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement: The product comply with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual.

The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available

## Copyrights

KURIO® & KD INTERACTIVE are registered trademarks of CIDE INTERACTIVE SLU. © 2016 Kidz Delight, Ltd. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by CIDE Interactive is under license. Other trademarks and trade names are those of their respective owners. MicroSDHC Logo is a trademark of SD-3C, LLC. © Hasbro 2016. All rights reserved.

BC

C17515US\_KDUS\_AW\_UM\_01\_170512

Made in China. Printed in China.

## Imported by

Kidz Delight, Ltd.  
1431 Opus Place Suite 110  
Downers Grove  
Illinois, IL 60515  
United States of America

